

**Issue
No.99**

The Official Publication of the
**NATIONAL LOCKSMITH
AUTOMOBILE ASSOCIATION™**

05.09

2008 Subaru Impreza



1. 2008 Subaru Impreza.



**2. Code Series: 30001-37850/Key Blank:
Dealer Key/Transponder Equipment Required**

Here are the two best websites for Automotive Locksmiths:


www.TheNationalLocksmith.com

Chat, Forums, Editorial,
Online Store, Tech Support

www.Laserkey.com

Product & Technology Sales,
Transponder Information Resources

3. Opening Method Technique: TC-2

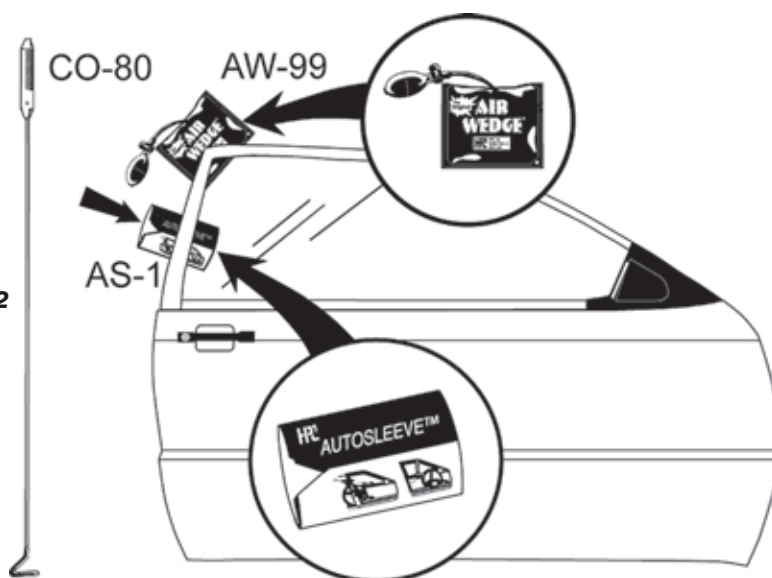

National Locksmith Automobile Association™

Publisher

Marc Goldberg

Director

Greg Mango

Printed in the U.S.A.
NLAA, a division of the
National Publishing Company
Publishers of
THE NATIONAL LOCKSMITH

1533 Burgundy Parkway
Streamwood, Illinois 60107
Phone 630-837-2044
Fax 630-837-1210

E-mail address: natlock@aol.com

Unsolicited manuscripts are
accepted, but must include SASE.

©2009 National Publishing Co.
All rights reserved.

Issue No. 99

Manufacturers: Interested in
offering rebates or discounts to
NLAA members? Contact Marc
Goldberg at the Home Office




**4. Carefully wedge a gap at the window and frame
using an Ultimate Auto Wedge or an Air Wedge.
Use the AutoSleeve to prevent damage to the paint.**

Note: Extra care should be taken when prying
the window or door away from the frame.

5. Insert the tool through the gap. Position the tip of the tool on the electric lock switch to open or by pulling out on the rocker button. Remove tool and deflate Air Wedge before opening door.



6. Lock Picking Style PX: Ignition Lock: Acc./On/Start = CW, Off/Lock = CCW. Driver Side Door: Lock = CW, Unlock = CCW. Glove Box: Lock = CW, Unlock = CCW.

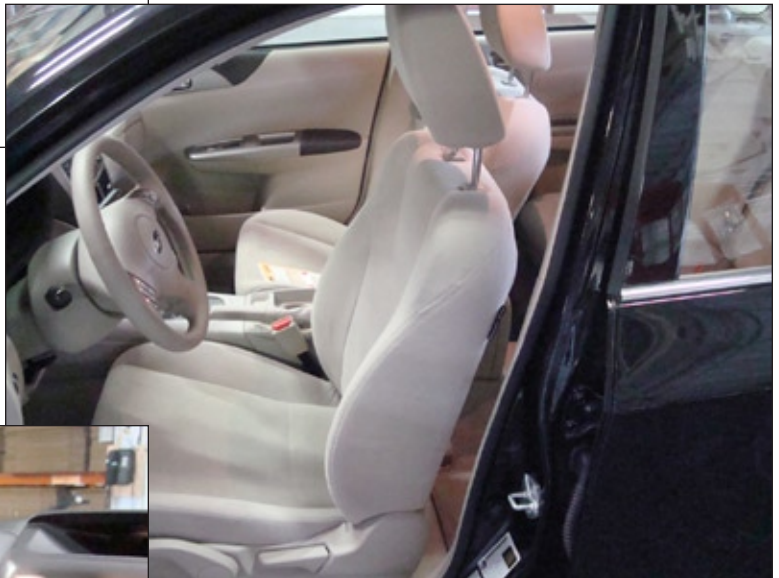

7. Side Impact Airbags: Inside Seatback Upholstery A3/Inside Lower Pillar–Curtain.




Ignition Lock


8. Ignition Lock Removal. Location: Column.




9. Position steering wheel column to remove 1 (P-2) screw on bottom portion of column shroud. Remove bottom shroud.

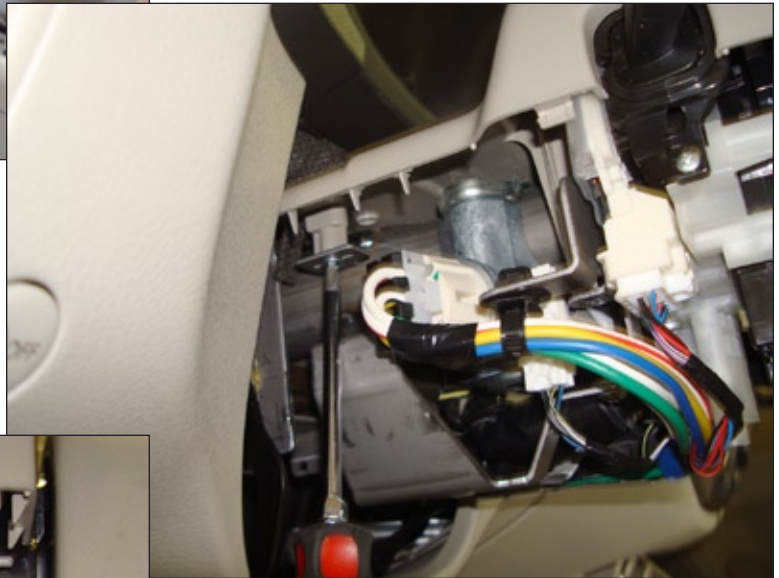

10. To remove top portion of column shroud, remove the 3 (P-2) screws holding shroud.

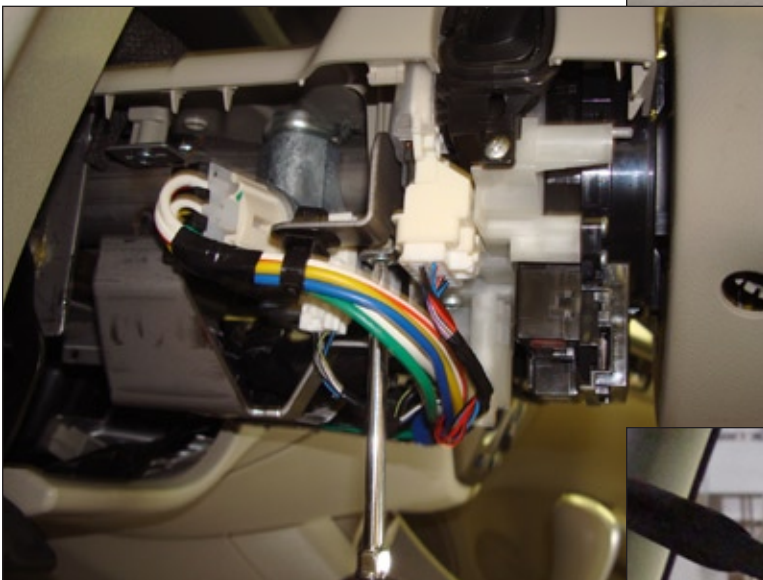

11. This picture shows location of second screw.

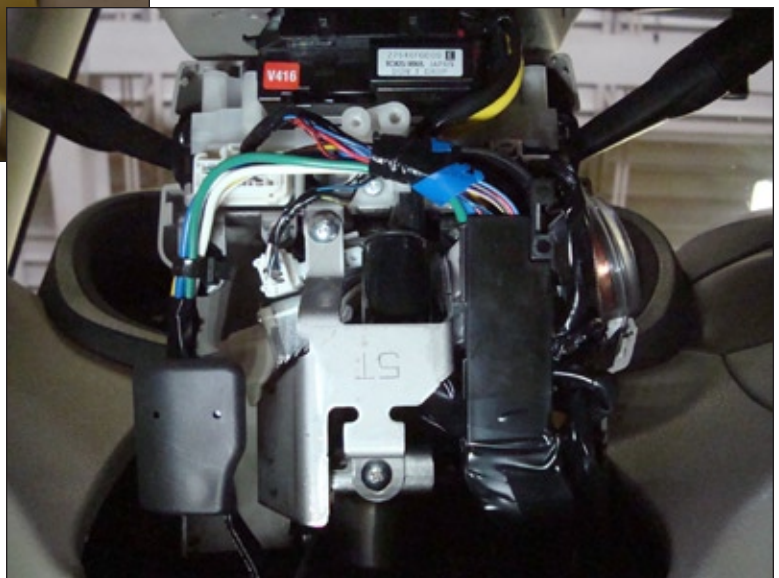


12. This Picture shows location of third screw under wiring on ignition lock side.

13. This picture shows screw locations of top shroud.




14. Remove 2 (P-2) screws of windshield wiper control arm. Pull outward on control arm to remove.


15. Remove plug for windshield wiper control assembly.

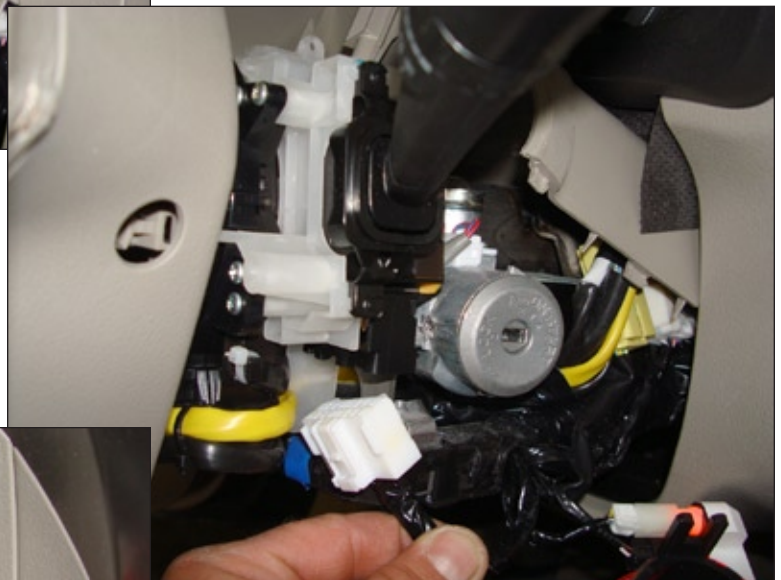

16. Carefully pull outward on transponder ring to access ignition lock roll pins.

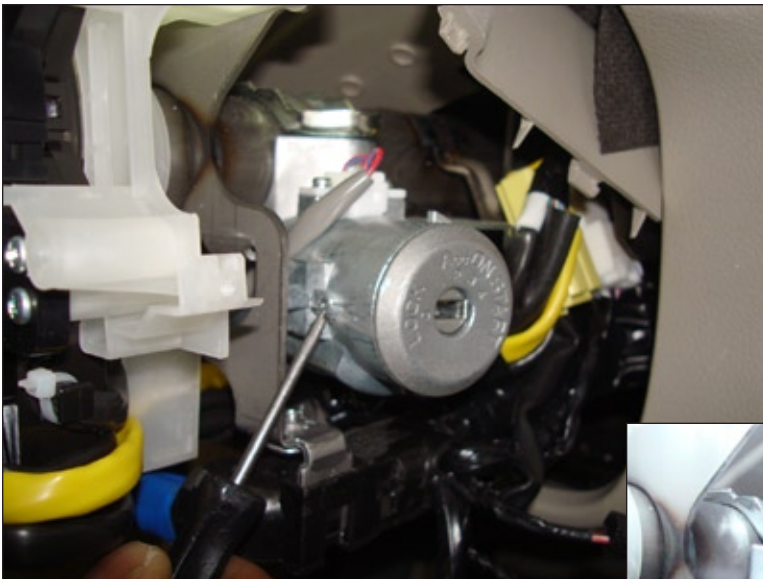

17. Picture of first roll pin.

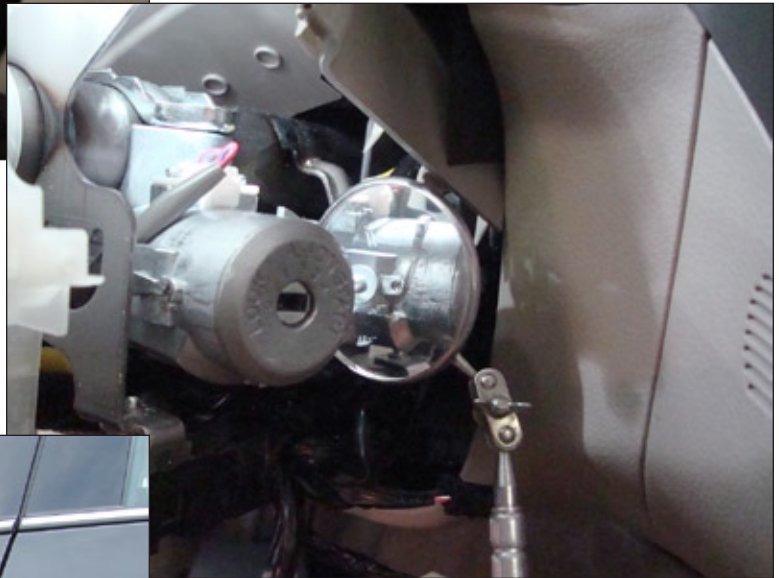

18. Picture of second roll pin using a mirror to photograph roll pin.



Door Lock

19. Door Lock Removal.



20. Door Panel Removal.

21. Remove side mirror interior access panel. (1-clip) *Note:* Some vehicles may have a radio speaker in panel. Remove speaker wire plug.



22. Remove screw cap at door latch release lever.

23. Remove 1 (P-2) screw at door latch release lever.




24. Remove screw cap at cup of door panel arm rest and door pull.



25. Remove 1 (P-2) screw.

26. Carefully pull upward on power door lock and power window assembly to remove, 3 snap clips. Disconnect the power window and power door lock wire plugs.

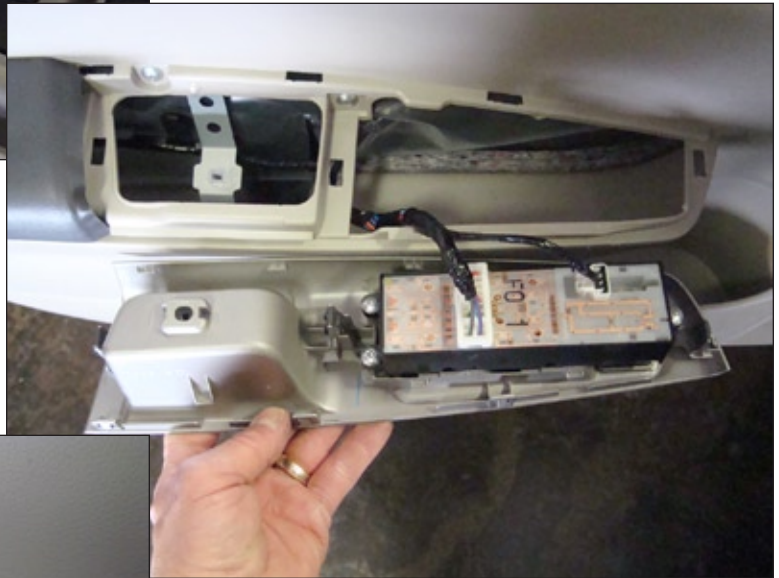


27. Remove the 2 (P-2) screws holding panel to door.

28. Carefully pull outward on bottom portion of door panel, then lift panel upward to remove from door. (10 clips)



29. Disconnect door latch and door lock rocker cables.

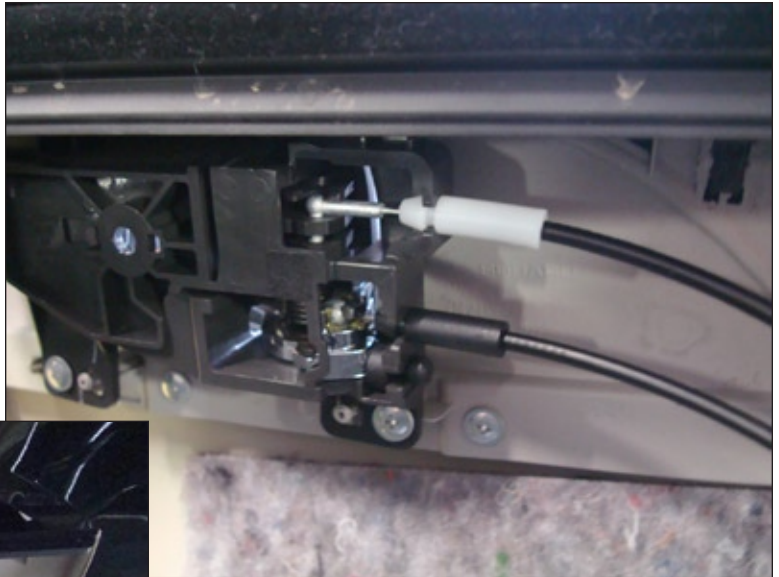

30. Picture of back side of door panel.

31. Pull back on plastic liner to access lock linkage.



32. Disconnect linkage on back of door lock.



33. Remove screw access cap on door edge.



34. Remove 1 (T-30) screw.




35. Pull outward on door lock to remove.





36. To disassemble door lock, remove C-clip and driver.

37. Remove spring.

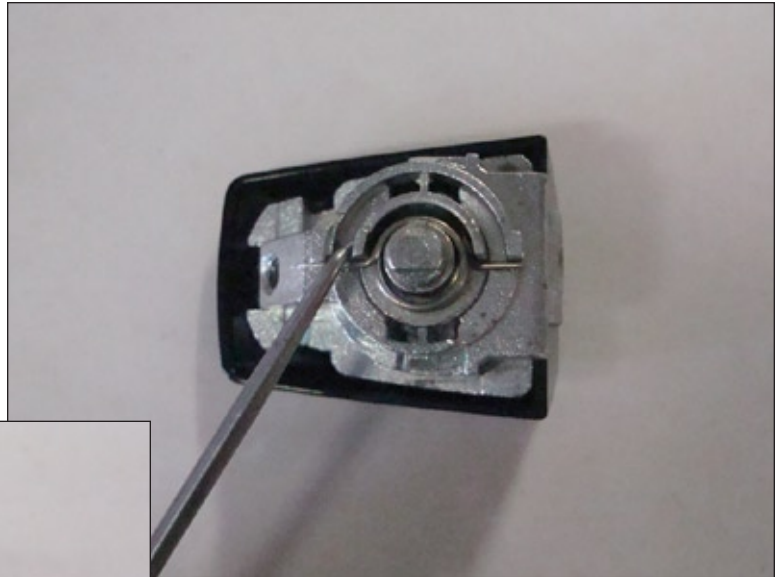


38. Carefully remove snap-on handle-lock face cap.

39. Remove face cap from lock.

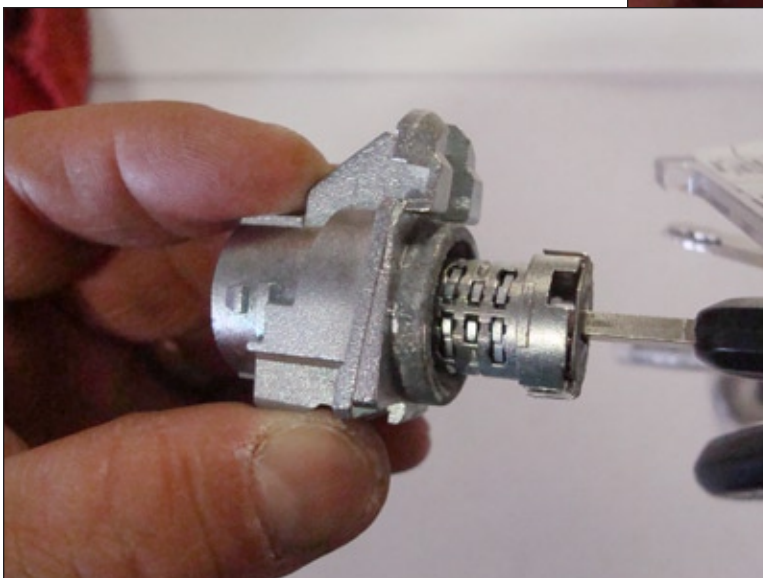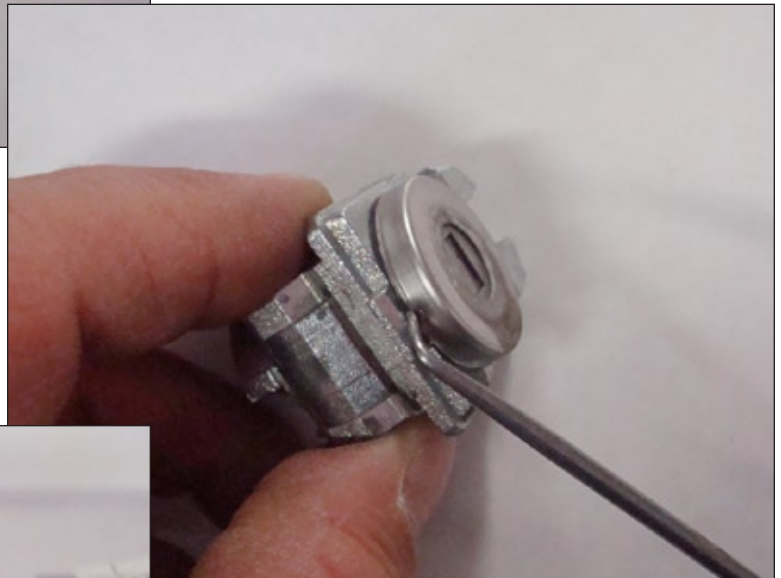

40. Remove cylinder core from housing.

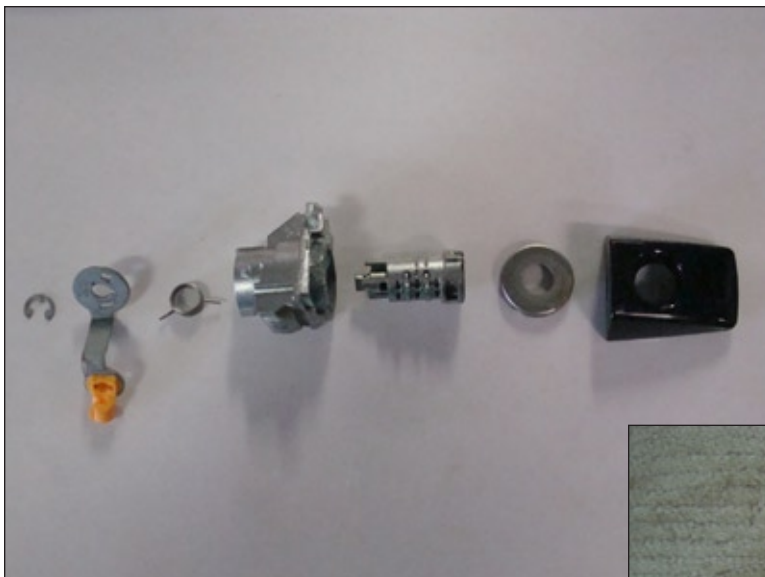

41. Picture of door lock parts.

Trunk Lock

42. Trunk Lock Release Removal.



43. Pull out on snap-in clip.


44. Lift and pull outward on trunk and gas release levers to remove.



45. Lift upward on shroud to remove.



46. Remove C-clip from lock housing.

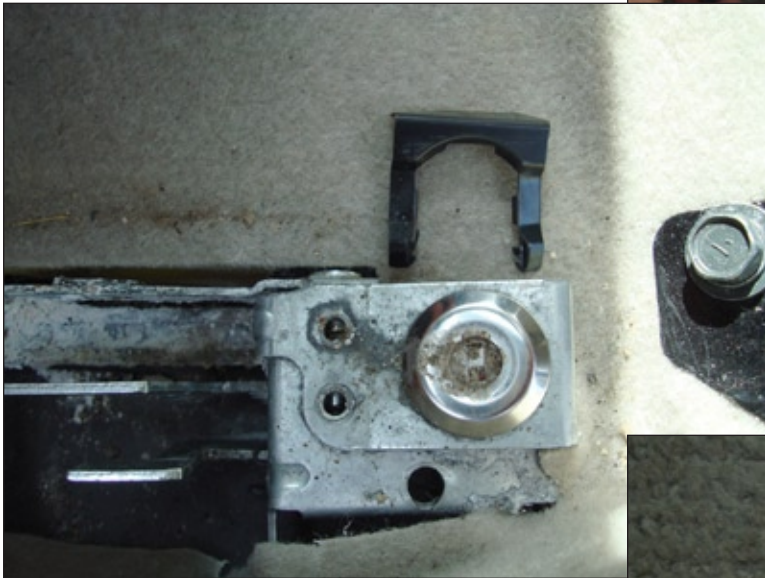

47. Picture of trunk release lock.



Glove Box Lock

48. Glove Box Lock Removal.





49. Pull out on glove box handle to open, insert key and turn clockwise to locked position.



50. Using a mirror, this picture shows the cylinder holding wafer at rear of lock. Depress on wafer and pull out on lock to remove.




51. Remove glove box core.



52. Depress on holding wafer to remove core from housing.

53. Picture of glove box lock parts.

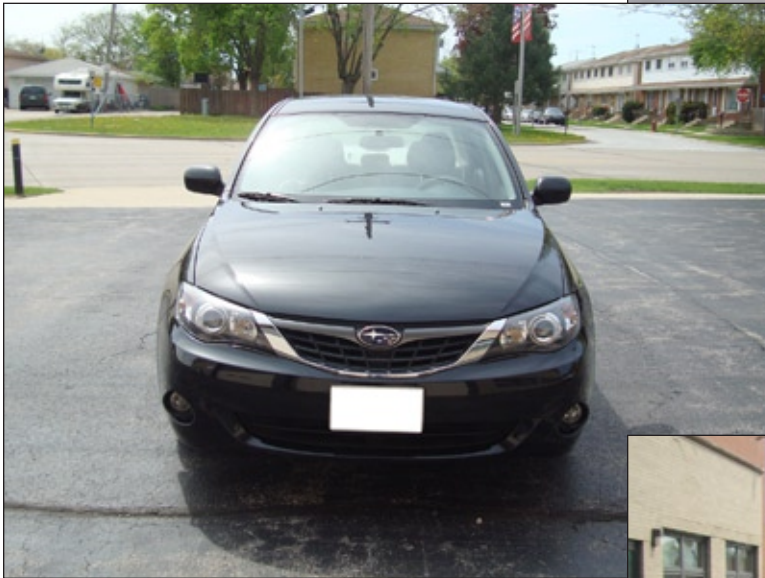

54. Picture of front of vehicle.



55. Picture of driver side of vehicle.



56. Picture of passenger side of vehicle.



57. Picture of rear of vehicle.

**58. Picture of vehicle
and valet key.**



NLAA
1533 Burgundy Parkway
Streamwood, Illinois 60107

STANDARD PRESORT
U.S. POSTAGE
PAID
DAYTONA BEACH, FL
PERMIT NO. 447